

Issued by Canon Europa N.V.

Model	: Network Interface Kit-TR4	No.:	Acc-164
			(FF-T01-B3-000025-01)
		DATE:	09.07.99

Location : NETWORK INTERFACE KIT-TR4

Subject : NETWORK INTERFACE KIT-TR4 INSTALLATION PROCEDURE (NETWORK MULTI-PDL PRINTER BOARD-H1/NETWORK PRINTER BOARD-K1)

Reason : This bulletin provides instructions for installing the Network Interface Kit-TR4 to the Network Multi-PDL Printer Board-H1/Network printer Board-K1.

Details : The pages that follow describe how the Network Interface Kit-TR4 may be installed. The product is an accessory designed in common for the following printer boards; see the respective Service Information bulletins for installation procedures.

- Network Multi-PDL Printer Board-D1/Network Printer Board-E1 (Service Bulletin Acc-162)
- Network Multi-PDL Printer Board-H1/Network Printer Board-K1 (this bulletin)
- Network Printer Board-F1 (Service Bulletin Acc-163)

Network Interface Kit-TR4 Installation Procedure

1	Points to Note during Installation
---	------------------------------------

Before turning off the main power, be sure to check that the FAX memory lamp is NOT on.


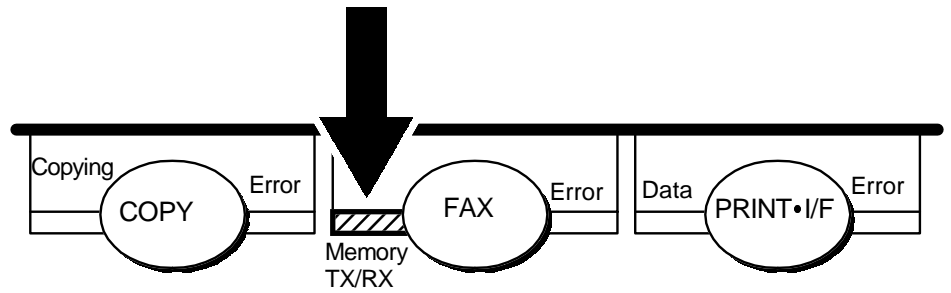


Fig. 1

2	Installation Procedure
---	------------------------

A. Checking the Package contents

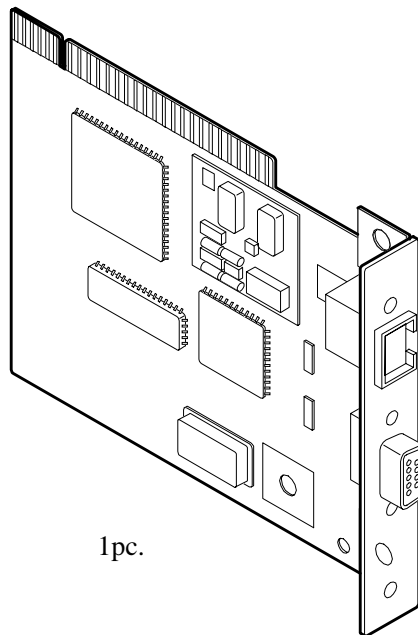

Network Interface Kit-TR4

1pc.

Fig. 2-1

B. Removing the Network Interface Kit-TR4

- 1) Turn off the main power.
- 2) Remove the two screws, and detach the PDL cover.

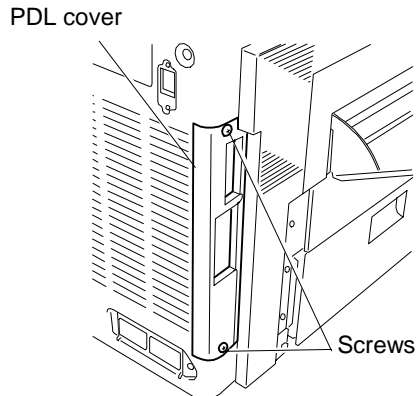


Fig. 2-2

- 3) Remove the four screws, and detach the rear cover.
- 4) Remove the three screws, and detach the flywheel.
- 5) Remove the two screws, and detach the cable cover.

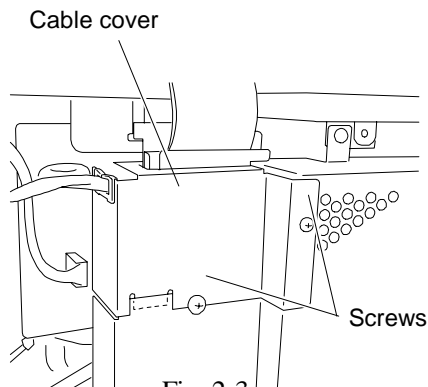


Fig. 2-3

- 6) Disconnect the two flat cables on the printer board side; then, disconnect the power connector.

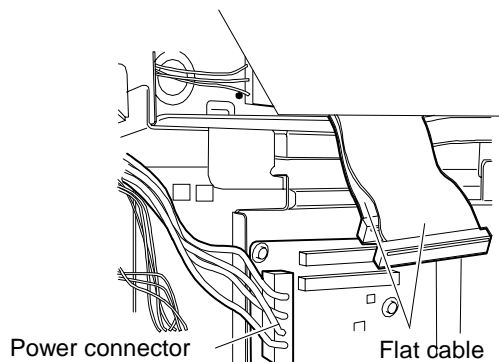


Fig. 2-4

- 7) Remove the three screws.

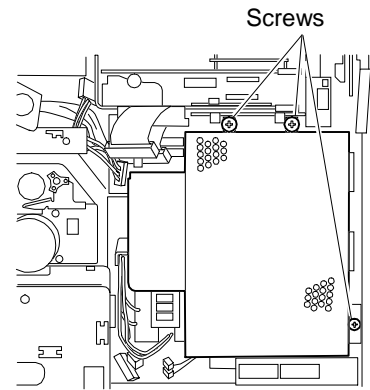


Fig. 2-5

- 8) While holding up the network printer unit with both your hands, free the upper left hook to detach the network printer unit from the copier.

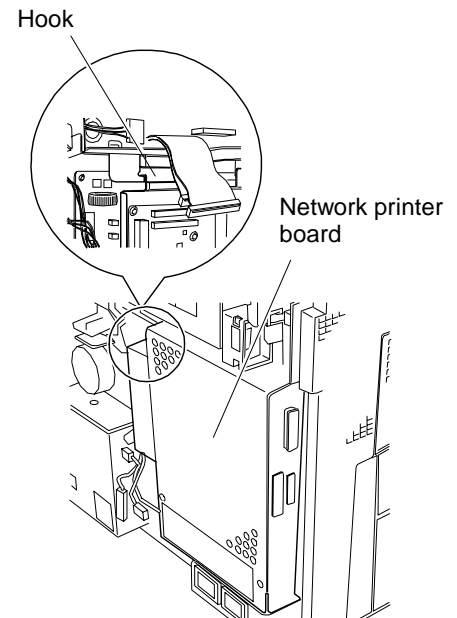


Fig. 2-6

C. Mounting the Network Interface Kit-TR4

- 1) Remove the twelve screws, and detach the upper cover of the network printer unit.

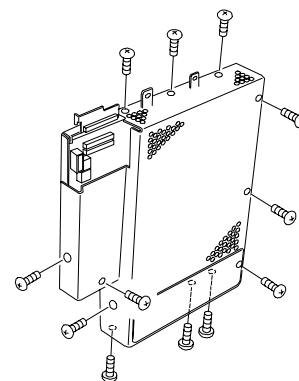


Fig. 2-7

- 2) Remove the two screws, and detach the TR4 dressing cover.

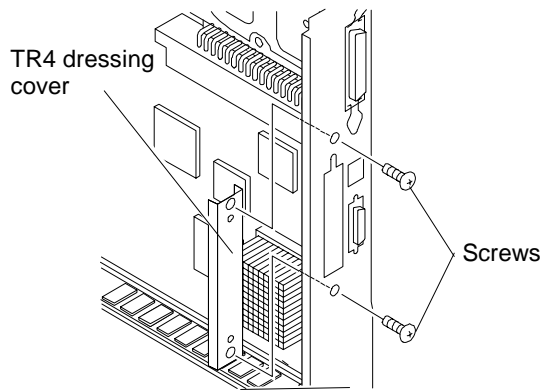


Fig. 2-8

- 3) Detach the connector cover, and insert the Network Interface Kit-TR4. (Be sure to orient it as shown in the figure.)

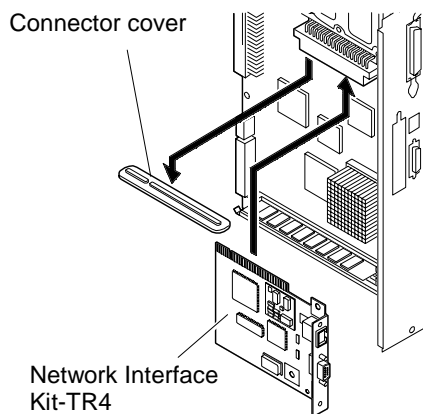


Fig. 2-9

- 4) Fit the two screws, removed previously from the dressing plate side of the network printer board; then, secure the Network Interface Kit-TR4 in place to the printer unit.

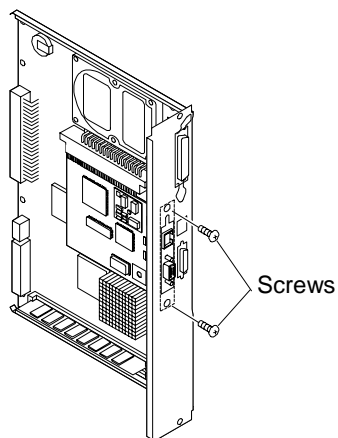


Fig. 2-10

- 5) Mount the upper cover of the network printer unit with twelve screws. (See Fig. 2-7.)

D. Mounting the Network Interface Kit-TR4

- 1) Remove the screws (at the bottom) used to secure the copier's left cover, and free the left cover toward the outside.

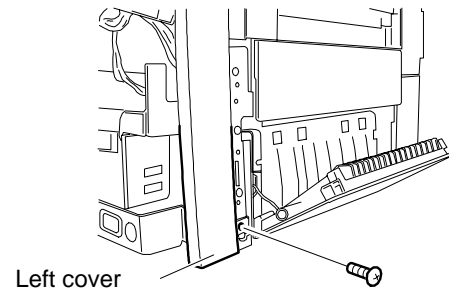


Fig. 2-11

- 2) While holding the network printer unit with both your hands, insert the lower right hook into the copier.

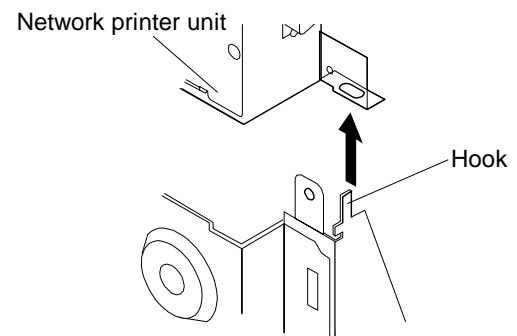


Fig. 2-12

- 3) Fit the hook in the upper left of the unit to the copier.

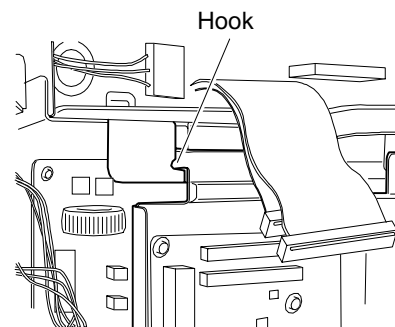


Fig. 2-13

- 4) Fit the three screws. (See Fig. 2-5.)
- 5) Connect the two flat cables and the power connector. (See Fig. 2-4.)
- 6) Mount the cable cover (See Fig. 2-3.), flywheel, left cover, and rear cover.
- 7) Mount the PDL dressing cover with two screws. (See Fig. 2-2.)

3	Setting the Network Interface Kit-TR4
---	---------------------------------------

When you have finished mounting the Network Interface Kit-TR4, be sure to request the administrator of the user's network to perform the following:

By referring to the Administrator's Guide, make necessary settings for the Network Interface Kit-TR4.